

Pioneer

Quick Start Guide

NAVIGATION AV SYSTEM

AVIC-F950DAB/AVIC-F950BT/AVIC-F850BT


This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the Operation Manual.

Basic hardware buttons


- 1 **▲ button**
Press to eject the disc.
- 2 **VOL (+/-) button**
Press to adjust the AV source volume.
- 3 **MODE button**
Press to display the AV operation screen or AppRadio Mode screen.
- 4 **HOME button**
Press to display the "Top Menu" screen.
- 5 **MAP button**
Press to display the map screen.
- 6 **TRK button**
- 7 **⏏ button**
Press to remove the detachable faceplate from the navigation system.

- The example screens in this guide are from AVIC-F950DAB. Actual screens may vary depending on the model used.
- Digital Audio Broadcasting is available on AVIC-F950DAB only.


Switching screens using the touch panel keys

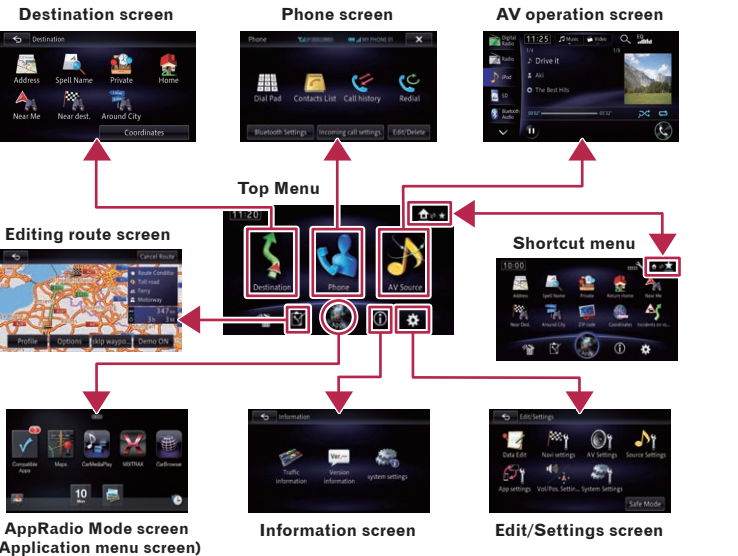

Switching screens using the hardware buttons

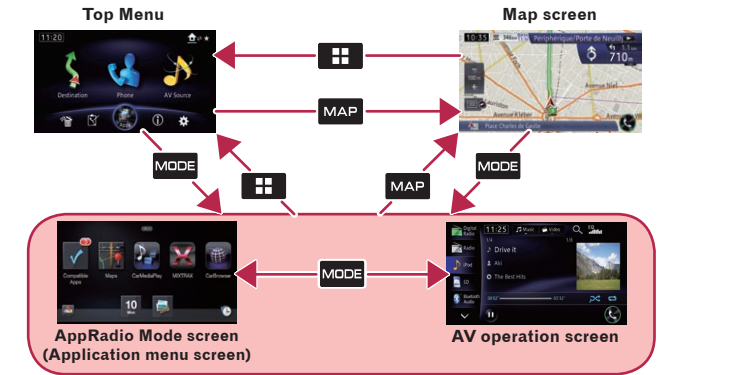

Destination menu

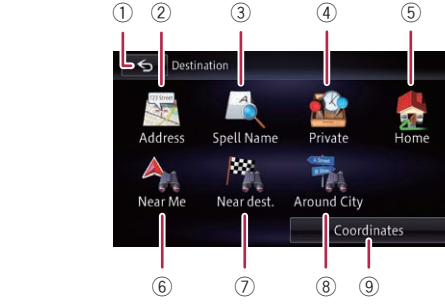

- 1 Returns to the previous screen
- 2 Searches for a location by address
- 3 Searches for a facility by name
- 4 Searches for a location from the history or your registered locations
- 5 Calculates the route to your home
- 6 Searches for a nearby facility
- 7 Searches for a facility near the destination
- 8 Searches for a facility in a specified city
- 9 Searches for a location by coordinates

Scrolling the map


- 1 Touch and hold a point on the map in the direction that you want to scroll. The map moves in the touched direction.
- 2 To slightly adjust the position, touch **Adju.** first, then touch the desired direction arrow (eight directions).

Searching for your destination by address

- 1 Display the "Destination" screen.
- 2 Touch **Address**.
- 3 Select the country.
- 4 Input the destination information.




Touch one of the options. After narrowing down your destination, the Location confirmation screen will appear.

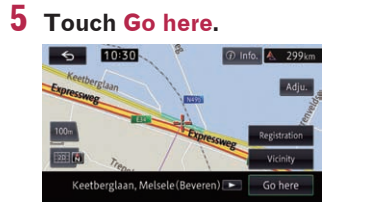

When the route calculation is completed, the Route confirmation screen appears.


Basic items on the map

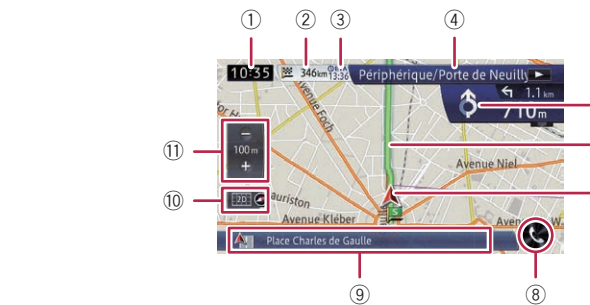

- 1 Current time
- 2 Distance to the destination (or distance to waypoint)
- 3 Estimated time of arrival
- 4 Next street name (or next guidance point)
- 5 Next direction of travel
- 6 Current route
- 7 Current position
- 8 Phone menu key
Displays the "Phone" screen.
- 9 Current street name (or AV information)
Switches between the current street name and current AV information.
- 10 Map control
Sets the view mode and the map orientation.
- 11 Map scale
Changes the map scale.

Swipe action on the map

You can operate some navigation functions by using a swipe action. To use the swipe action, touch and hold the next direction of travel on the map screen to display the operation guide. Then, slide your finger toward the function that you want to use on the operation guide.

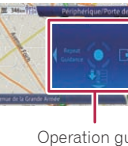

Playing your iPod

You can operate your iPod by connecting it to the navigation system using the USB interface cable for iPod (sold separately). However, iPod source is not available when an iPod with Lightning connector is connected to this navigation system. To play music and/or video files on your iPod, install CarMediaPlayer on your iPod, and then launch it while in AppRadio Mode.

- 1 Touch the keys in the following order on the "Top Menu" screen.
[Settings] → **Source Settings** → **iPod Settings**
- 2 Touch **iPod Connection Settings** to "30-pin Connector".
- 3 Display the AV operation screen.
- 4 Connect your iPod. The source changes and then playback will start.
- 5 Use the touch panel keys on the screen to control your iPod.

Using the touch panel keys (iPod)

- Music**
- 1 Switches a source
 - 2 Switches between the music list screen and video list screen
 - 3 Displays the list screen
 - 4 Recalls the equaliser curve
 - 5 Sets the repeat playback range
 - 6 Sets shuffle playback
 - 7 Switches between playback and pause
 - 8 Shows only the current image
 - 9 Changes the screen size of the video
- Video**
- 1 Switches a source
 - 2 Switches between the music list screen and video list screen
 - 3 Displays the list screen
 - 4 Recalls the equaliser curve
 - 5 Sets the repeat playback range
 - 6 Sets shuffle playback
 - 7 Switches between playback and pause
 - 8 Shows only the current image
 - 9 Changes the screen size of the video

Pairing your Bluetooth® devices

You can use various additional functions (hands-free phoning, Bluetooth audio and AppRadio Mode) by connecting your Bluetooth devices to this navigation system. To use the functions, pair the devices with the navigation system in advance.

- 1 Activate the Bluetooth function on your device.
- 2 Touch the keys in the following order on the "Top Menu" screen.
[Settings] → **System Settings** → **Bluetooth Settings**
- 3 Touch **Registration**. The system searches for and lists nearby devices.
- 4 Touch your device name in the list.
- 5 Enter the PIN code from your device if required. (The default code is 1111.)
- 6 Touch **OK**.
- 7 Select whether to transfer your contacts if required.
- 8 Select whether to use the Bluetooth audio device if required.
- 9 Select whether your device is an Android™ device or not. If your device is an Android device, (1) touch **Yes**, (2) select whether to set your device for the AppRadio Mode. If your device is other than an Android device, (1) touch **No**, (2) select whether your device is an iPod with Lightning connector or not, (3) if your device is an iPod with Lightning connector, select whether to set the device for AppRadio Mode.
- 10 Touch **OK**. When the pairing is complete, you can use the functions.

Using AppRadio Mode

You can control applications for iPhone and smartphone directly on the navigation screen (AppRadio Mode). To use the AppRadio Mode, install the AppRadio app on the iPhone or smartphone beforehand to enable launching of the application on the navigation system. For details about the AppRadio app, visit the following site: <http://www.pioneer.eu/AppRadioMode>

Starting procedure

- 1 Touch the keys in the following order on the "Top Menu" screen.
[Settings] → **App settings** → **App connection settings**
- 2 Select the type of OS in your device.
- 3 Connect your device to this product via the separately sold cable. If your device is an iPhone with Lightning connector or an Android device, proceed to step 4.
- 4 Connect your iPhone with Lightning connector or Android device to this product via the Bluetooth wireless technology.

Using an application

- 1 Touch **Apps** on the "Top Menu" screen. The AppRadio app is launched, and the AppRadio Mode screen (Application operation screen) appears.
- 2 Touch an application icon. The application is launched, and the AppRadio Mode screen (Application operation screen) appears.
- 3 Operate the application. If the **HOME** button is pressed while you are operating the application via the navigation system, you will return to the AppRadio Mode screen (Application menu screen).

Pioneer

Manuel de démarrage rapide

SYSTÈME DE NAVIGATION AV

AVIC-F950DAB/AVIC-F950BT/AVIC-F850BT


Ce guide est destiné à vous guider à travers les fonctions de base de ce système de navigation. Pour en savoir plus, veuillez consulter le Manuel de fonctionnement.

Boutons physiques de base


- Bouton ▲**
Appuyez sur ce bouton pour éjecter le disque.
- Bouton VOL (+/-)**
Appuyez sur ce bouton pour ajuster le volume de la source AV.
- Bouton MODE**
Appuyez sur ce bouton pour afficher l'écran de fonction AV ou l'écran AppRadio Mode.
- Bouton HOME**
Appuyez sur ce bouton pour afficher l'écran "Menu supérieur".
- Bouton MAP**
Appuyez sur ce bouton pour afficher l'écran de la carte.
- Bouton TRK**
- Bouton 🏠**
Appuyez sur ce bouton pour retirer la façade amovible du système de navigation.

- Les exemples d'écran dans ce guide proviennent de l'AVIC-F950DAB. Les écrans réels peuvent être différents selon le modèle utilisé.
- La radiodiffusion audionumérique est uniquement disponible sur l'AVIC-F950DAB.

Changement d'écrans au moyen des touches de l'écran tactile

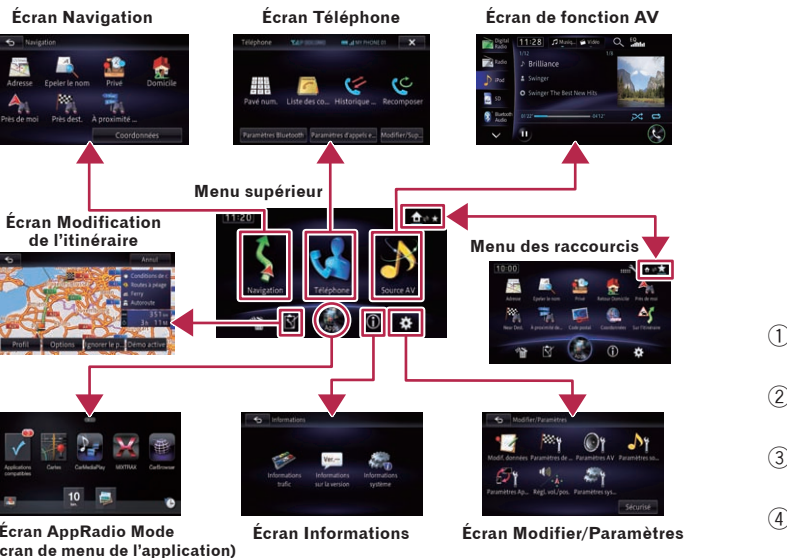

Changement d'écrans au moyen des boutons physiques

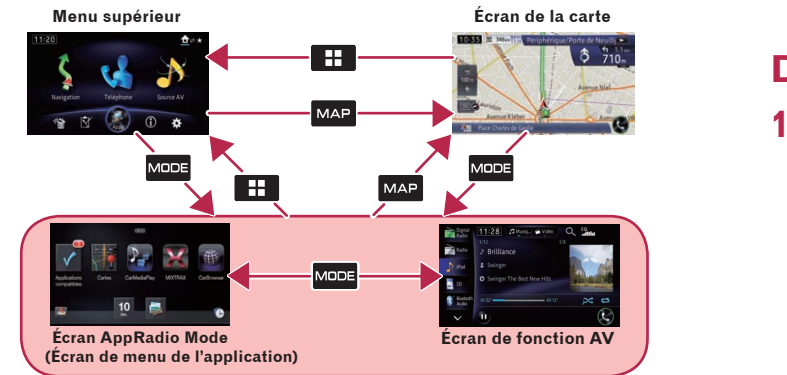

Menu Navigation



- Revient à l'affichage précédent
- Recherche un emplacement à partir d'une adresse
- Recherche un point de repère à partir d'un nom
- Recherche un emplacement dans l'historique ou les emplacements enregistrés
- Calcule l'itinéraire jusqu'à votre domicile

- Recherche un point de repère à proximité
- Recherche un point de repère près de la destination
- Recherche un point de repère dans une ville spécifique
- Recherche un emplacement à partir des coordonnées

Défilement de la carte

- Touchez de manière prolongée un point sur la carte dans le sens dans lequel vous souhaitez défiler.**


La carte se déplace dans le sens touché.

- Pour ajuster légèrement la position, touchez d'abord Régl., puis touchez la flèche du sens désiré (huit directions).**

Une fois le calcul d'itinéraire terminé, l'écran de confirmation de l'itinéraire apparaît.

Recherche de votre destination par son adresse

- Affichez l'écran "Navigation".**
- Touchez Adresse.**
- Sélectionnez le pays.**
- Tapez les informations sur la destination.**

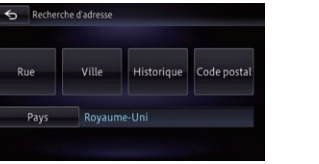

Touchez l'une des options. Après avoir restreint votre destination, l'écran de confirmation du lieu apparaîtra.

- Touchez Aller !.**



Une fois le calcul d'itinéraire terminé, l'écran de confirmation de l'itinéraire apparaît.


Éléments de base sur la carte



- Heure locale
- Distance jusqu'à la destination (ou distance jusqu'au point de passage)
- Heure estimée d'arrivée
- Prochain nom de rue (ou prochain point de guidage)
- Prochain sens de déplacement
- Itinéraire actuel
- Position actuelle
- Touche du menu Téléphone
- Affiche l'écran "Téléphone".
- Bascule entre le nom de rue actuel et les informations AV actuelles.
- Contrôle de la carte

Action de glissement sur la carte

Vous pouvez commander certaines fonctions de navigation grâce à l'action de glissement. Pour utiliser l'action de glissement, touchez de manière prolongée le prochain sens de déplacement sur l'écran de la carte pour afficher le guide de fonctionnement. Ensuite, faites glisser votre doigt vers la fonction que vous souhaitez utiliser sur le guide de fonctionnement.

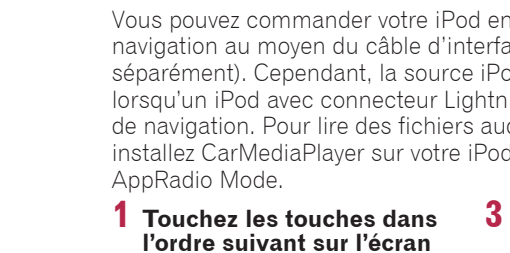


- Heure locale
- Distance jusqu'à la destination (ou distance jusqu'au point de passage)
- Heure estimée d'arrivée
- Prochain nom de rue (ou prochain point de guidage)
- Prochain sens de déplacement
- Itinéraire actuel
- Position actuelle
- Touche du menu Téléphone
- Affiche l'écran "Téléphone".
- Bascule entre le nom de rue actuel et les informations AV actuelles.
- Contrôle de la carte

Lecture de l'iPod


Vous pouvez commander votre iPod en le connectant au système de navigation au moyen du câble d'interface USB pour iPod (vendu séparément). Cependant, la source iPod n'est pas disponible lorsqu'un iPod avec connecteur Lightning est connecté à ce système de navigation. Pour lire des fichiers audio et/ou vidéo sur votre iPod, installez CarMediaPlayer sur votre iPod, puis lancez-le dans AppRadio Mode.

- Touchez les touches dans l'ordre suivant sur l'écran "Menu supérieur".**
➡ Param. source ➡ Param. iPod
- Touchez Param. connexion iPod pour sélectionner "Connecteur 30 broches".**

Utilisation des touches de l'écran tactile (iPod)

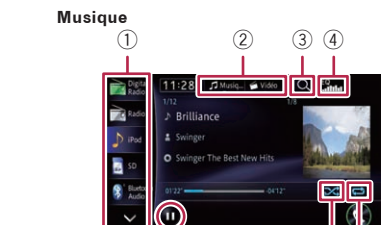

- Change de source
- Bascule entre l'écran de liste audio et l'écran de liste vidéo
- Affiche l'écran de liste
- Rappelle la courbe d'égalisation
- Règle la plage de lecture répétée

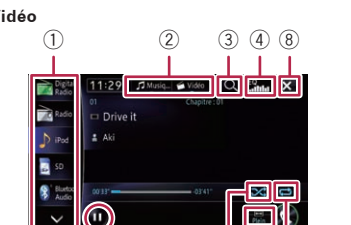


- Règle la lecture aléatoire
- Bascule entre la lecture et la pause
- N'affiche que l'image actuelle
- Change de taille d'écran de la vidéo

Appariement de vos périphériques Bluetooth®

Vous pouvez utiliser un éventail de fonctions supplémentaires (Téléphone main libre, audio Bluetooth et AppRadio Mode) en connectant vos périphériques Bluetooth à ce système de navigation. Pour utiliser les fonctions, appariez au préalable les périphériques avec le système de navigation.

- Activez la fonction Bluetooth sur votre appareil.**
- Touchez les touches dans l'ordre suivant sur l'écran "Menu supérieur".**
➡ Param. système ➡ Paramètres Bluetooth

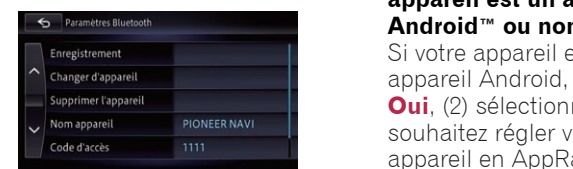

- Touchez Enregistrement.**
Le système recherche et répertorie les appareils à proximité.
- Touchez le nom de votre appareil dans la liste.**
- Saisissez le code PIN de votre appareil si demandé. (Le code par défaut est 1111.)**
- Touchez OK.**
Une fois l'appariement terminé, vous pouvez utiliser les fonctions.

Utilisation de AppRadio Mode

Vous pouvez contrôler les applications pour iPhone et smartphone directement sur l'écran de navigation (AppRadio Mode). Pour utiliser le AppRadio Mode, installez au préalable l'application AppRadio sur l'iPhone ou le smartphone pour permettre le lancement de l'application sur le système de navigation. Pour en savoir plus sur l'application AppRadio, visitez le site suivant : <http://www.pioneer.eu/AppRadioMode>

Procédure de départ

- Touchez les touches dans l'ordre suivant sur l'écran "Menu supérieur".**
➡ Param. app ➡ Param. connexion app
- Sélectionnez le type de système d'exploitation sur votre appareil.**
- Connectez votre appareil à ce produit via le câble vendu séparément.**
Si votre appareil est un iPhone avec connecteur Lightning ou un appareil Android, passez à l'étape 4.

Utilisation d'une application

- Touchez Apps sur l'écran "Menu supérieur".**
L'application AppRadio est lancée et l'écran AppRadio Mode (Écran de menu de l'application) apparaît.
- Touchez une icône d'application.**
L'application est lancée et l'écran AppRadio Mode (Écran de commande de l'application) apparaît.
- Commandez l'application.**
Si le bouton HOME est enfoncé alors que vous commandez l'application via le système de navigation, vous serez ramené sur l'écran AppRadio Mode (Écran de menu de l'application).